
Vault INS-P1460-Y1-PAC

ASSEMBLY INSTRUCTIONS

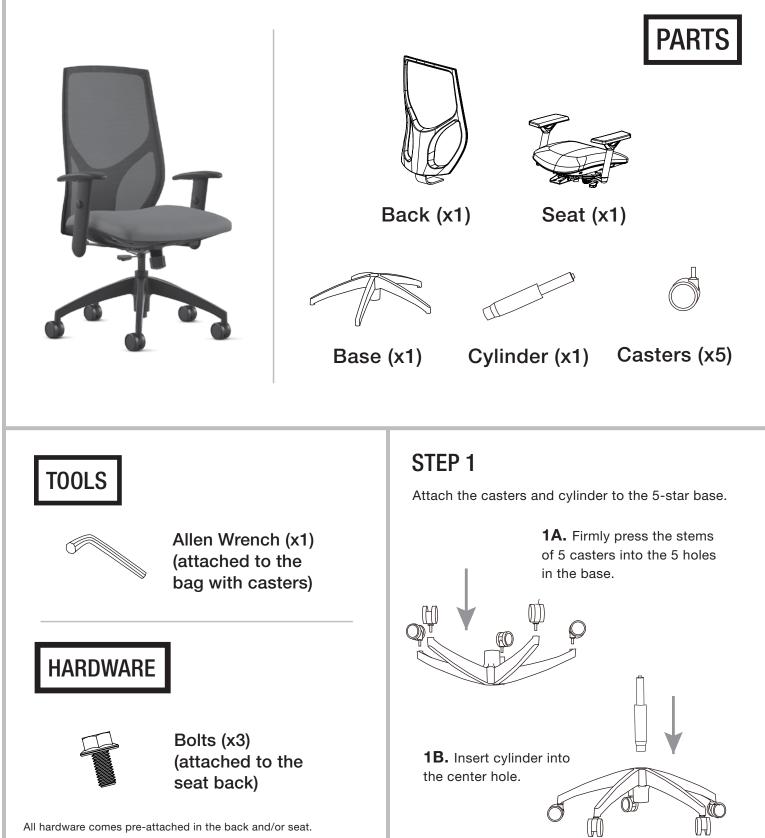






Missing parts or hardware? Call 888.925.SEAT

STEP 2

Attach the back to the seat.

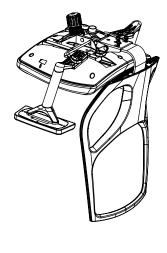




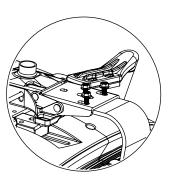

2B. Place the back plate under the seat as shown, aligning the holes. Using the Allen wrench, reattach the screws from the top.

STEP 3

Insert the assembled back/seat unit onto the cylinder, which was placed in the base in Step 1. Press down firmly to secure.

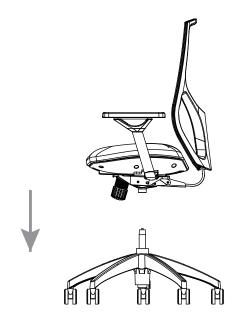



©2021 9to5 Seating